



Rugged Lantern™
350A & 500A Instructions
 English USA – en

350A Lumen / Model #Z5A17
 500A Lumen / Model #Z5B17



INSTRUCTIONS

Thank you for purchasing this alkaline battery powered Zippo® Rugged Lantern™. **READ ALL WARNINGS AND INSTRUCTIONS** before using the product for the first time. Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you (“Purchaser”) and not Zippo Manufacturing Company (“Zippo”) are responsible.

If you have any problems with the operation of this product, **DO NOT return the product to the retail store**. Instead, consumers in the U.S. should contact Zippo Consumer Relations at 1-888-442-1932 or visit www.zippo.com.

⚠ WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

GENERAL SAFETY WARNINGS AND INSTRUCTIONS:

- Failure to follow all instructions may result in electric shock, fire and/or serious injury.
- Do not expose to intense sunlight or temperatures above 120°F (49°C).
- Not intended for children.
- Do not disassemble the Lantern or attempt to repair or modify it in any manner.
- If the Lantern is excessively hot, is emitting odor, becomes deformed, damaged, or demonstrates abnormal operation, immediately discontinue use and contact Zippo.

OPERATING INSTRUCTIONS

This Lantern uses batteries that are not included with this package. Purchase the required batteries and install as outlined below.

Battery Installation & Replacement

Turn the lantern upside down so the battery compartment is facing right-side up.

• 500A Lumen / Model #Z5B17 Lanterns

– While holding the lantern main body, twist the bottom battery compartment counter clockwise about 1/8 of a turn and remove. Remove old batteries and dispose of them properly as outlined in the Safe Battery Disposal section in this manual.

– Insert three (3) D cell batteries following the plus (+) or minus (-) diagrams as shown on the wall of each battery cavity (figure A).

– Align the battery compartment post with the cavity in the battery compartment (figure B). Push down on the battery compartment and rotate clockwise to lock it. The compartment cover will click when fully closed.

• 350A Lumen / Model #Z5A17 Lanterns

– While holding the lantern main body, twist the bottom battery compartment counter clockwise about 1/4 of a turn and remove.

– Remove the battery tray and old batteries. Dispose of batteries properly as outlined in the Safe Battery Disposal section in this manual.

– Insert four (4) AA cell batteries following the plus (+) or minus (-) diagrams as shown on the wall of the battery tray (figure C).

– Align the battery tray in the battery compartment so that the two arrows are pointing towards each other (→←), then slide tray down (figure D). Ensure tray is inserted so THIS SIDE UP text is showing.

– Push down on the battery compartment and rotate clockwise to lock it. The compartment cover will click when fully closed.



Fig. A



Fig. B

 


Fig. C



Fig. D

CAUTION:

- LED radiation. Do not stare directly into light. May be harmful to the eyes.

DISCLAIMER:

- Zippo will not be responsible or liable for any damages you or any third party may suffer as a result of use or misuse of this Lantern.

LIMITED WARRANTY

Your new ZIPPO RUGGED LANTERN is warranted by Zippo Manufacturing Company against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase. This warranty does not cover damage or failure caused by or attributable to abuse, accident, acts of God, misuse, improper or abnormal care or use, failure to follow instructions or repair other than those provided by Zippo.

This limited warranty gives you specific legal rights. You may also have other legal rights that vary by state or country. Other than as to the foregoing, this warranty is in lieu of all other express and implied warranties. Any implied warranties which by law cannot be excluded are limited to this same period. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Other Zippo products carry different warranties.

To obtain service under this limited warranty, refer to repair instructions at Zippo.com or contact Consumer Relations at 1-888-442-1932. **DO NOT return the product to the retail store.** Proof of purchase is required for warranty service.

Powering On the Lantern

- Press and hold POWER button for 3 seconds to turn lantern ON. The lantern will start in the LOW light setting.
- Pressing the POWER button within 3 seconds will change the lantern to the following light settings:
 – LOW (initial setting) | MEDIUM | HIGH | SOS BLINKING
- Repeatedly press POWER button within 3 seconds of any mode to cycle to the next desired setting.

Powering OFF the Lantern

- Press the POWER button once after 3 seconds in any mode.

Safe Battery Disposal

- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful in the United States, under state and federal environmental laws and regulations.
- Contact, local, county, or state recycling centers for information on proper disposal.

Care and Maintenance

If the lantern becomes soiled, gently clean it with a solution of water and mild dish washing detergent. Take care to NOT use abrasive cloths or cleaning agents that may harm or damage the lantern.

Rugged Lantern:

1. Carry Handle
2. Lens
3. LED Dome
4. Main Body
5. Power Button
6. Bottom Battery Compartment
7. Hanging Hook

