



OPERATING INSTRUCTIONS

Our classic design features a safety lock button (A) which releases and allows the ignition switch (B) to engage

TO OPERATE:

- Depress the Safety Lock Button (A) Blue Indicator Light (E) will turn on. Within less than 2 seconds slide Ignition Switch (B) forward and depress the Safety Lock Button (A) to ignite and hold to maintain the arc. Blue Indicator Light (E) will turn on while the Product is in use and the arc is on.
- Release the ignition switch to stop the arc.

6

- The arc will shut off automatically after 10 seconds unless released earlier.

CHARGING INSTRUCTIONS

The Product is shipped with a partial charge and **MUST** be fully charged before use the first time. Use **ONLY** the charging cable provided with your Product to avoid potential overheating, leaking or explosion. Follow the charging instructions carefully.

- Plug the small Micro USB end (H) of the charging cable (included) into the Small Micro USB Port (F). Plug the large USB end (G) into a suitable charging device or Listed/Certified ITE Power Supply. Charging will begin automatically.
 - Blue Indicator Light (E) will turn ON during charging. Once the Product is fully charged the Blue Indicator Light will shut off.
 - Periodically inspect the condition of the charging cable. **DO NOT** attempt to charge the Product if the charging cable is damaged. Contact Zippo for replacement options if the Product cable has become worn or broken.
 - After charging/recharging, disconnect the charging cable.
 - When disconnecting the cord, be sure to pull by the plug rather than the cord, to reduce risk of damage.
 - Store charging cable so it does not become entangled or pose a safety hazard.
 - Keep charging cable away from sharp edges.
- NOTE:** If using a vehicle's 12 volt DC accessory outlet as a charging source, be aware that some vehicles require you to turn on the ignition to power the accessory outlet. Refer to your vehicle's owner manual.

7

SAFE BATTERY DISPOSAL

- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful in the United States, under state and federal environmental laws and regulations. This symbol indicates that the equipment must **NOT** be thrown into general waste but should be collected separately and properly recycled under local regulations.
- All rechargeable batteries will degrade over time, eventually limiting the battery's ability to retain a charge. This Product contains a lithium polymer rechargeable battery pack, which must be disposed of properly when it will no longer retain a charge.
- For information on recycling this battery:
 - Call2Recycle:** Call (800) 822-8837 or visit www.call2recycle.org.
 - Zippo Consumer Relations:** Call 1-888-442-1932 or visit www.zippo.com.
 - Contact local, county, or state recycling centers for information on proper disposal.



Zippo Manufacturing Company

33 Barbour Street
Bradford, PA 16701
www.zippo.com

121651-c

zippo®

Zippo Rechargeable Candle Lighter

English USA – en
Model No. Z7A18

Thank you for purchasing the Zippo® Mini Flex Neck Rechargeable Candle Lighter ("Product").

READ ALL WARNINGS AND INSTRUCTIONS

before using your Product for the first time. Improper use of this Product may result in Product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser") and not Zippo Manufacturing Company ("Zippo") are responsible.

© Zippo Manufacturing Company 2020_rC

If you have any problems with the operation of your Product, **DO NOT return it to the retail store**. Instead, consumers in the U.S. should contact Zippo Consumer Relations at 1-888-442-1932 or visit www.zippo.com.

WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save these instructions for future reference.

GENERAL SAFETY WARNINGS AND INSTRUCTIONS

- Failure to follow all instructions may result in electric shock, fire and/or serious injury.
- The Product batteries are designed to work in temperatures between -4°F and 120°F (-20°C and 49°C). The Product can be damaged and battery life shortened if stored or operated outside of these temperatures.
- DO NOT** expose battery to intense heat or dispose in a fire as this may result in an explosion.
- DO NOT** expose to intense sunlight or temperatures above 120°F (49°C).
- DO NOT** expose to moisture or submerge in liquid.
- Not intended for children.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this Product. If there is any damage to the Product such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and dispose of it properly as outlined in the Safe Battery Disposal section in this manual.

2

- DO NOT** disassemble this Product or attempt to repair or modify it in any manner.
- DO NOT** attempt to charge Product using any method, apparatus or connection other than the included charging cable to avoid the potential for overheating, leaking, or explosion.
- If the Product is excessively hot, is emitting odor, becomes deformed, damaged, or demonstrates abnormal operation, immediately discontinue use and contact Zippo.
- Fully charge your Product prior to any extended storage.
- All batteries lose energy from self-discharge over time, especially at higher temperatures. When the Product is not in use, we recommend that the battery is charged at least every three (3) months.

3

IMPORTANT: Use only with Listed/Certified ITE Power Supply.

DISCLAIMER

Zippo will not be responsible or liable for any damages you or any third party may suffer as a result of use or misuse of this Product. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

4

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION: Any changes or modifications not expressly approved by Zippo could void the user's authority to operate the equipment.

5