



Arc Lighter Insert

English USA – en

Double Beam Model #Z8C19 rA

Thank you for purchasing the ZIPPO® ARC LIGHTER INSERT ("Product"). **READ ALL WARNINGS AND INSTRUCTIONS** before using your Product for the first time. Improper use of this Product may result in Product damage, for which damages you ("Purchaser") and not Zippo Manufacturing Company ("Zippo") are responsible.

If you have any problems with the operation of your Product, **DO NOT return it to the retail store.** Instead, consumers in the U.S. should contact Zippo Consumer Relations at 888-442-1932 or visit zippo.com

⚠WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save these instructions for future reference.

GENERAL SAFETY WARNINGS AND INSTRUCTIONS:

- Keep out of reach of children.
- Failure to follow all instructions may result in electric shock, fire and/or serious injury.
- DO NOT expose battery to intense heat or dispose in a fire as this may result in an explosion.
- DO NOT expose to intense sunlight or temperatures above 120°F (49°C).
- DO NOT expose to moisture or submerge in liquid.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this Product. If there is any damage to the Product, such as dents, punctures, tears, deformities or corrosion, due to any cause,

© Zippo Manufacturing Company 2019.

181906-a

ONE YEAR LIMITED WARRANTY


Zippo Manufacturing Company warrants the Product against manufacturing defects in material and workmanship under normal use. This warranty does not cover, and Zippo shall have no liability with respect to, damage, failure or loss caused by or attributable to abuse, accident, misuse, improper or abnormal use, neglect, improper or unauthorized repair, failure to follow instructions provided by Zippo or "acts of God" or other contingencies beyond the control of Zippo. This warranty does not cover the incidental or consequential damages, although some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty coverage extends to the original purchase and begins on the date of purchase and ends one (1) year thereafter. Other than as to the foregoing, this warranty is in lieu of all other express and implied warranties. Any implied warranties which by law cannot be excluded are limited to this same period. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To obtain proper instructions for service under this limited warranty, refer to repair instructions at zippo.com or contact Zippo Consumer Relations at consumerrelations@zippo.com or 1-888-442-1932. **Do not return the Product to the retail store.** If the Product is covered by the warranty, Zippo will repair or replace the item or will refund the purchase price. Any attempt to open the sealed portions of the Product case by user or any non-approved repair center will void this warranty.

NOTE: Proof of purchase is required for warranty service.

ZIPPO MANUFACTURING COMPANY
33 Barbour Street | Bradford, PA 16701 U.S.A.

Arc Lighter Insert

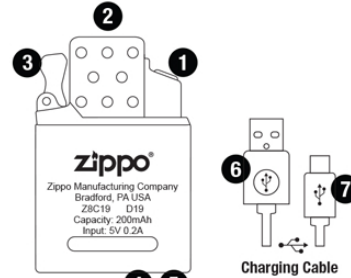

1. Ignition Button
2. Arc Beam
3. Cam
4. Battery Indicator Light
5. Small Micro USB Port (INPUT to recharge Product)
6. Charging Cable – Large USB end
7. Charging Cable – Small USB end

OPERATING INSTRUCTIONS:

Install the Insert into your Zippo Lighter Case

- Carefully remove insert from package.
- Open lighter lid and remove lighter insert.
- Firmly grasp lighter case edge(s) with finger(s) and thumb, then slide new arc insert into lighter case.
- Be sure to flip insert cam down before inserting into lighter case.

Ignition

- Open the lighter lid.
- Press down on ignition button with thumb and hold to ignite arc beam.
- Release ignition button to extinguish arc beam.

NOTE: Beam will automatically shut off after 10 continuous seconds. Simply press ignition button to relight.

Recharging the Product

- The Product is shipped with a partial charge and **MUST** be fully charged before using the first time. Use **ONLY** the charging cable provided with your Product to avoid the potential for overheating, leaking, or explosion. Follow the charging instructions below carefully.
- Plug the small Micro USB end of the charging cable (included) into the Product USB port. Plug the large USB end into a suitable charging device or Listed/Certified ITE Power Supply. Charging will begin automatically.
- BLUE indicator light will show the following statuses:
 - Solid light indicates charging in progress
 - No light indicates charging completed
 - Flashing light indicates charging needed
- If the product will not charge or if the BLUE Indicator light does not light up after plugging into power supply, verify that the large end of the USB cable is not inserted upside down.
- Periodically inspect the condition of the charging cable. Do not attempt

to charge the Product if the charging cable is damaged. Contact Zippo to purchase a replacement if your cable has become worn or broken.

- After charging/recharging, disconnect the charging cable.
- When disconnecting the cord, be sure to pull by plug rather than cord to reduce the risk of damage.
- Place charging cable so it does not become entangled or become a safety hazard.
- Keep charging cable away from sharp edges.

NOTE: When using a vehicle's 12 volt DC accessory outlet as a charging source, be aware that some vehicles require you to turn on the ignition to power the accessory outlet. Refer to your vehicle's owner's manual.

Safe Battery Disposal

Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful in the United States, under state and federal environmental laws and regulations. This symbol indicates that the equipment must NOT be thrown into general waste but should be collected separately and properly recycled under local regulations.



- All rechargeable batteries will degrade over time, eventually limiting the battery's ability to retain a charge. This Product contains a lithium ion rechargeable battery pack, which must be disposed of properly when it will no longer retain a charge.
- For information on recycling this battery:
 - Call2Recycle: Call (800) 822-8837 or visit www.call2recycle.org.
 - Zippo Consumer Relations Call 888-442-1932 or visit www.zippo.com.
 - Contact local, county, or state recycling centers for information on proper disposal.



DISCLAIMER:

Zippo will not be responsible or liable for any damages you or any third party may suffer as a result of use or misuse of this Product.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

CAUTION: Any changes or modifications not expressly approved by Zippo could void the user's authority to operate the equipment.

discontinue use and dispose of it properly as outlined in the Safe Battery Disposal section in this manual.

- DO NOT disassemble this Product or attempt to repair or modify it in any manner.
- DO NOT attempt to charge Product using any method, apparatus or connection other than the included charging cable to avoid the potential for overheating, leaking or explosion.
- DO NOT attempt to use Product to charge another device.
- If the Product is excessively hot, is emitting odor, becomes deformed, damaged, or demonstrates abnormal operation, immediately discontinue use and contact Zippo.
- Fully charge your Product prior to any extended storage.
- All batteries lose energy from self-discharge over time, especially at higher temperatures. When the Product is not in use, we recommend that the battery is charged at least every three (3) months.

IMPORTANT: Use only with Listed/Certified ITE Power Supply.

- Ignite lighter away from face and clothing.
- This insert is only designed to work with standard-sized genuine Zippo Windproof Lighter models including: Standard, Vintage, Armor®, and 1941 Replica.
- DOES NOT work with Slim or 1935 Replica models.
- DO NOT use unless installed in a genuine Zippo Windproof Lighter case.
- DO NOT attempt to disassemble the Product for cleaning or modify it in any manner. This will void the warranty.
- Always grasp lighter case edge(s) with finger(s) and thumb when inserting or removing insert. Gripping face of lighter may cause difficulty.
- Follow all instructions and warnings provided by manufacturer of any other item when using this product.