



アーケライターインサイドユニット
ダブルビーム モデル # Z8C23

ZIPPO®アーケライターインサイドユニット(以下「本製品」)をご購入いただき、誠にありがとうございます。
ごさいます。製品を初めて使用する前に、すべての注意事項と使用方法をお読みください。誤った使用をした場合、製品の損傷の原因となる可能性があります。またその責任は、Zippo Manufacturing Company(「ZIPPO」)ではなく、お客様が負うこととなります。

△警告: すべての安全上の注意事項および使用方法をお読みください。注意事項および使用方法に従わない場合、感電や火災、重大なケガを引き起こす可能性があります。必要な時に参照できるように、本説明書を保管してください。


一般的的な安全に関する注意事項および使用方法:

- 子供の手の届かないところに保管してください。
- 爆発の原因となる可能性があるため、本製品を異常な高温にさらしたり、火の中に入れたりしないでください。
- 強い太陽光の下や温度が40℃を超える場所には置かないでください。湿度の高い場所に保管したり、液体に浸したりしないでください。
- 本製品に過度の落下、衝突、摩擦、その他の衝撃を与えないよう十分に注意ください。何らかの原因により本製品に凹み、穴、割け、変形、腐食などの損傷が生じた場合は、本マニュアルの「安全なリサイクルの廃棄について」項を参照の上、使用を中止して適切に処分してください。
- 過熱、濡れ、爆発を避けるため、付属の充電ケーブル以外で本製品を充電しないでください。
- 本製品を使用して他のデバイスを充電しないでください。
- 本製品に過熱、臭気、変形、破損、異常動作が生じた場合は、直ちに使用を中止してください。
- 長期間保管する際は、製品を完全に充電してください。

- 本製品を使用しないときは、少なくとも1ヶ月ごとに充電することをおすすめします。
- すべてのバッテリーは、特に高温の場所では時間の経過とともに自己放電によりエネルギーを失います。
- 高品質な充電用アダプタ等で充電してください。
- 懐かや衣服から離して点火してください。
- 本製品は、レギュラーサイズのジッポーライター(レギュラー、フラットトップ、Armor®, 1941レプリカ等)専用設計されています。
- 必ずジッポーライターケースに入れて使用してください。ライターケースに入れて本製品だけで使用しないでください。
- スリムまたは1935レプリカモデル、他社製ライターではご使用いただけません。
- クリーニングのために本製品を分解しないでください。また、いかなる方法でも改造しないでください。分解・改造すると保証の対象外となります。
- 本製品の取り付けまたは取り外しの際には、常にライターケースの端を親指と他の指で持つてください。ケースの中心部を持つと、うまく取り付け・取り外しができない場合があります。
- 本製品を使用するときは、他の製品の製造元が提供するすべての注意事項及び取扱説明書に従ってください。

免責事項:

Zippoは、本製品の使用または誤用によりお客様または第三者が被る可能性がある損害について、一切責任を負わないものとします。

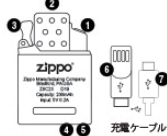


アーケライターインサイドユニット


- ダブルタップ点火ボタン
- ダブルプラズマークビーム
- カム
- バッテリーインジケータライト
- USB-Cポート(本製品の充電用入力)
- 充電ケーブル - 大きいUSB端子
- 充電ケーブル - USB-C端子

取扱説明書:


インサイドユニットの取付方法。

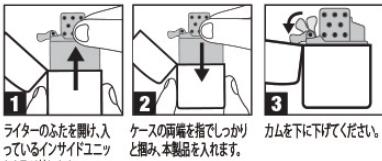

点火方法:

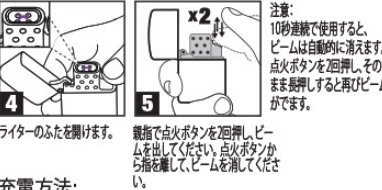

充電方法:

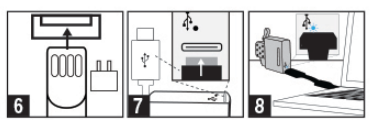

充電アダプタ等のUSBポート 充電ケーブルのマイクロUSB端子を、本製品の充電用マイクロUSBポートに接続します。

青のインジケータランプは、次のことを示します:・

点灯:充電中
消灯:充電完了
点滅:充電量低下/充電が必要

本製品は、出荷時は充電量が少ない状態です。初めてのご使用の前に必ず充電してください。

バッテリーの廃棄について:
電池はゴミ箱に捨てないでください。

- すべての充電式/バッテリーは経年劣化し、最終的に充電能力が低下します。本製品にはリチウムイオン充電式/バッテリーが含まれており、充電ができなくなった場合は適切に廃棄する必要があります。
- 使用済み電池製品は、家庭の廃棄物と一緒に廃棄しないでください。設備の整った施設でリサイクルに出してください。リサイクルについては、地方自治体または輸入代理店にお問い合わせください。右記は、本製品を一般廃棄物として処分してはならず、地域の規制に従い別途収集し、適切にリサイクルする必要があることを示しています。
- 本製品を廃棄する際は、お住まいの地域の地方条例に従ってください。

2年間の限定保証

Zippo Manufacturing Companyは、通常の使用における材料および製造上の欠陥に対して製品を保証します。本保証書は、乱用、事故、誤用、不適切なまたは異常な使用、不注意、不適切なまたは不正な修理、Zippoの指示に従わないこと、天災またはその他Zippoの制御不能な不測の事態に起因する損害、故障、損失については保証の対象外とし、Zippoは一切の責任を負わないものとします。

保証期間は、ご購入日から始まり、購入日から2年後までとなります。保証サービスには購入証明が必要です。

修理品の送付方法

注意: 本製品の保証期間は購入日より2年間です。無償修理を受けるには、購入日を証明する書類(シール等)が必要になります。

- ライターを緩衝材で包み、箱や二重封筒などを使い梱包してください。
- 本証とともに、郵便番号・住所・氏名・電話番号・故障箇所を記載したメモと、購入日が確認できる書類を同封してください。
- 下記の修理品送付先まで発送してください。

※お預かりする個人情報、修理品の返送に関する目的以外には使用いたしません。

修理品送付先

〒550-0003
大阪市西区京町堀1-8-5
マルカイコーポレーション Zippoリペア係
TEL: 06-7637-5051
受付: 10:00~17:00(土日祝を除く)



Arc Lighter Insert

Double Beam Model #Z8C23

Thank you for purchasing the ZIPPO® ARC LIGHTER INSERT ("Product"). READ ALL WARNINGS AND INSTRUCTIONS before using your Product for the first time. Improper use of this product may result in Product damage, for which damages you and not Zippo Manufacturing Company ("Zippo") are responsible.

△WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save these instructions for future reference.

GENERAL SAFETY WARNINGS AND INSTRUCTIONS:

- Keep out of reach of children.
- DO NOT expose battery to intense heat or dispose in a fire as this may result in an explosion.
- DO NOT expose to intense sunlight or temperatures above 49°C. DO NOT expose to moisture or submerge in liquid.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the Product, such as dents, punctures, tears, deformities or corrosion, due to any cause, discontinue use and dispose of it properly as outlined in the Safe Battery Disposal section in this manual.
- DO NOT attempt to charge Product using any method, apparatus or connection other than the included charging cable to avoid the potential for overheating, leaking or explosion.
- DO NOT attempt to use Product to charge another device.

- If the Product is excessively hot, is emitting odor, becomes deformed, damaged, or demonstrates abnormal operation, immediately discontinue use and contact Zippo.
- Fully charge your Product prior to any extended storage.
- When the Product is not in use, we recommend that the battery is charged at least every three (3) months.
- All batteries lose energy from self-discharge over time, especially at higher temperatures.
IMPORTANT: Use only with Listed/Certified ITE Power Supply.
- Ignite lighter away from face and clothing.
- This insert is only designed to work with regular-sized genuine Zippo Windproof Lighter models including: Regular, Vintage, Armor®, and 1941 Replica.
- DO NOT use unless installed in a genuine Zippo Windproof Lighter case.
- DO NOT attempt to disassemble the Product for cleaning or modify it in any manner. This will void the warranty.
- Always grasp lighter case edge(s) with finger(s) and thumb when inserting or removing insert. Gripping face of lighter may cause difficulty.
- Follow all instructions and warnings provided by manufacturer of any other item when using this product.

DISCLAIMER:


ZIPPO WILL NOT BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES YOU OR ANY THIRD PARTY MAY SUFFER AS A RESULTS OF USE OR MISUSE OF THIS PRODUCT.

Arc Lighter Insert


- Double Tap Ignition Button
- Double Plasma Arc Beam
- Cam
- Battery Indicator Light
- USB-C Port (INPUT to recharge Product)
- Charging Cable - Large USB end
- Charging Cable - USB-C end

OPERATING INSTRUCTIONS:


Install the Insert into your Zippo Lighter Case.

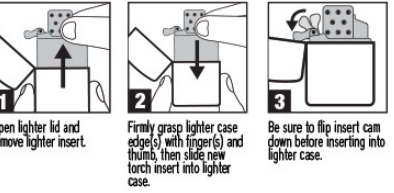

IGNITION:

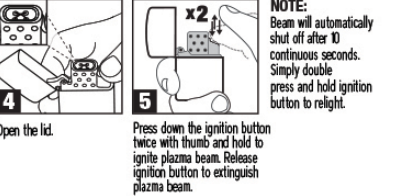

RECHARGING THE PRODUCT:

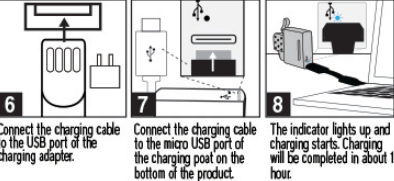

BLUE indicator lights will indicate the following:

Solid = Charging
No Light = Charging complete
Flashing = Low Battery / Needs Charging

The Product is shipped with a partial charge and must be fully charged before using the first time.

SAFE BATTERY DISPOSAL:

Never dispose of batteries in the garbage.

- All rechargeable batteries will degrade over time, eventually limiting the battery's ability to retain a charge. This unit contains a lithium ion rechargeable battery pack, which must be disposed of properly when it will no longer retain a charge.
- Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or Distributor for recycling advice. This symbol indicates that the equipment must NOT be thrown into general waste but should be separately and properly recycled under local regulations.
- Follow local ordinances when disposing of this product.

Two Year Limited Warranty

Zippo Manufacturing Company warrants the Product against manufacturing defects in material and workmanship under normal use. This warranty does not cover, and Zippo shall have no liability with respect to, damage, failure or loss caused by or attributable to abuse, accident, misuse, improper or abnormal use, neglect, improper or unauthorized repair, failure to follow instructions provided by Zippo or "acts of God" or other contingencies beyond the control of Zippo.

Warranty coverage extends to the original purchase and begins on the date of purchase and ends two (2) years thereafter. Proof of purchase is required for warranty service.

How to send repairs

NOTE: The warranty period of this product is 2 years from the date of purchase. In order to receive free repair, you will need a document proving the date of purchase (eg receipt).

- Wrap the lighter in cushioning and pack it in a box or double envelope.
- Please enclose the document that shows the postal code, address, name, telephone number, failure part, and the proof that proves the date of purchase together with this instruction manual.
- Please send the insert to the repair address below:

* The personal information we hold will only be used for the purpose of returning the repaired product.

Destination for repairs

550-0003
1-18-5 Kyomachibori, Nishi-ku, Osaka
Marukai Corporation Zippo Repairer
TEL: 06-7637-5051
Business hours: 10:00-17:00 (excluding weekends and holidays)